

Makka – Replacing the Brake Lever

Tools required:

- 8mm Wrench

Step 1: Remove the 8mm nut on the underside of the brake lever.



Step 2: Push the securing bolt up and out of the brake assembly. The lever will come off the assembly once removed.



Step 3: Insert the new lever into the assembly and put the securing bolt through the assembly.

Step 4: Tighten the 8mm nut to just 8Nm (firmly hand tight)

Complete!