


Makka – Replacing a Front Turnsignal


Tools required:

- 13mm wrench
- Not required, but can be helpful: Needle Nose Pliers
-


Step 1: Pull back the rubber hood of the headlight. By following the cables exiting the Turnsignal assembly into the rubber hood, identify the 2 connections that run to the Turnsignal the needs to be replaced.

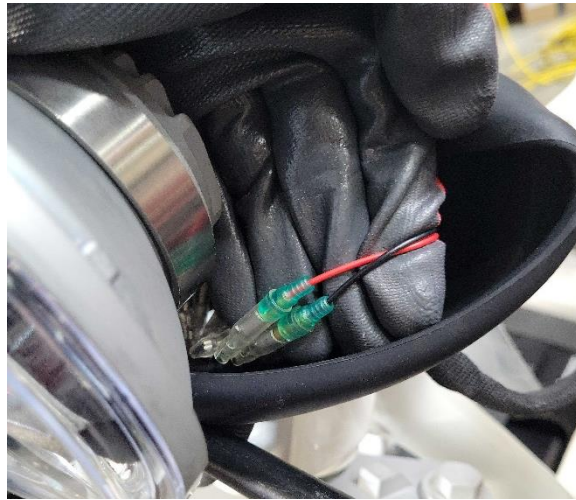

Step 2: Firmly pull out to disconnect these 2 connections. Push the cables out of the rubber hood.

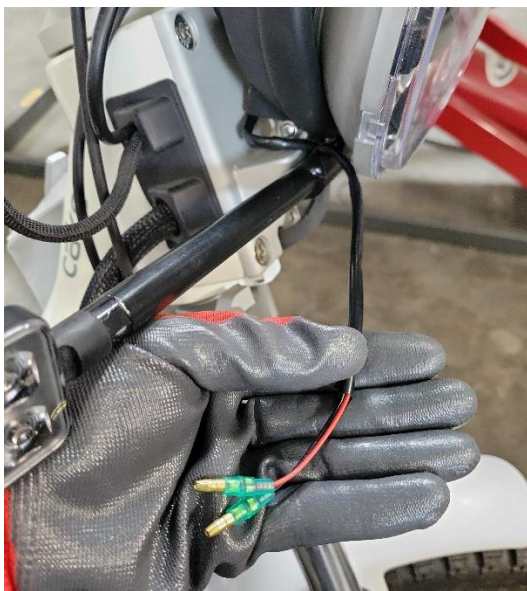

Step 3: Loosen the 13mm nut on the Turnsignal all the way, until the Turnsignal can be removed, and the cables pulled out of the assembly.

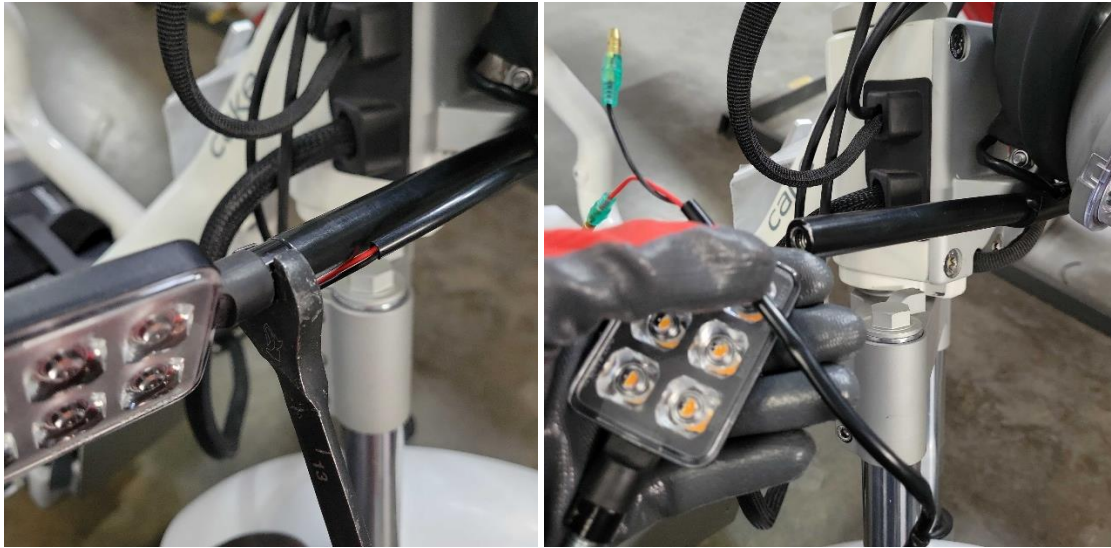

Step 4: Begin installing the new Turnsignal. Push the new Turnsignal cables through the assembly, and into the rubber hood.

Step 5: Plug in the 2 connections and pull the rubber hood back over the headlight.

Step 6: Tighten the 13mm nut so the Turnsignal is vertical.

Step 7: Power on the bike and test for functionality.

Complete!